
67C10-BZL INSTALL INSTRUCTIONS

PART	QTY	APPLICATION
67C10-IBZ	1	Ignition switch bezel
67C10-LBZ	1	Lighter bezel
67C10-RBZ	2	Retainer bezels (headlight switch + wiper/washer)
67C10-RTBZ	1	Radio tune bezel
67C10-RVBZ	1	Radio volume bezel
Total	6	


67C10-BZL INSTALL INSTRUCTIONS

Step 1: Disconnect the negative battery terminal. Some bezels surround electrical switches, so disconnecting power prevents accidental shorts.

Step 2: Locate and remove both knobs and bezels from the front of the dash (Fig. 1). The switch shafts will protrude through the dash panel with the stock bezel surrounding it (Fig 2.). You shouldn't have to remove the dash.

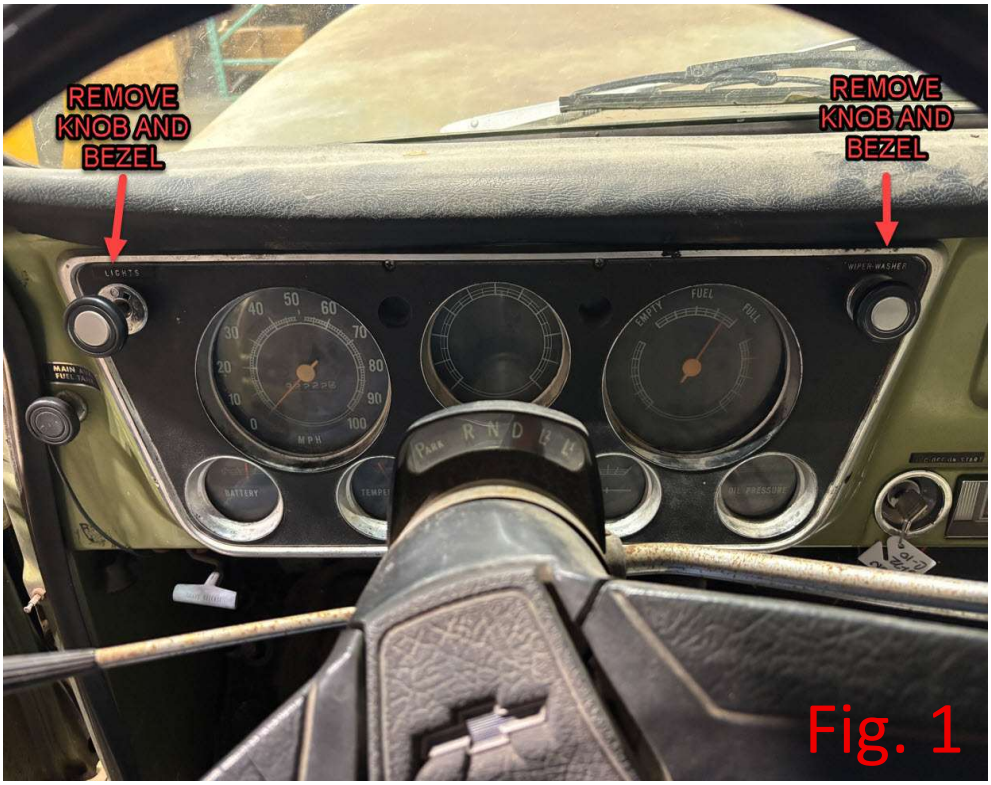


67C10-BZL INSTALL INSTRUCTIONS

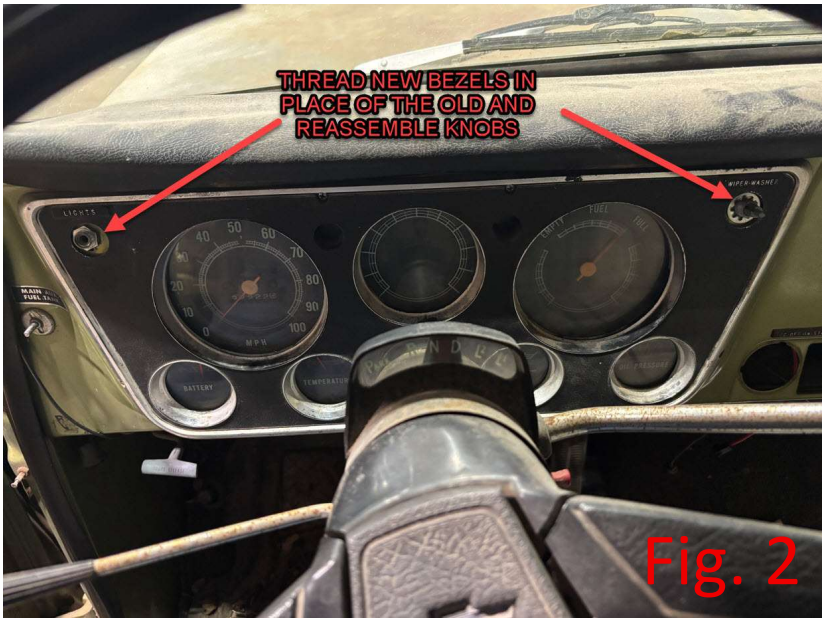

Step 3: Thread new RBZ bezels onto stock hardware and reassemble knobs. (Fig. 3)




Step 4: Remove radio knobs and bezels and ignition and lighter assemblies (Fig. 4). The radio bezels should slide right off the shaft. More details of ignition and lighter assemblies can be found in the next section.

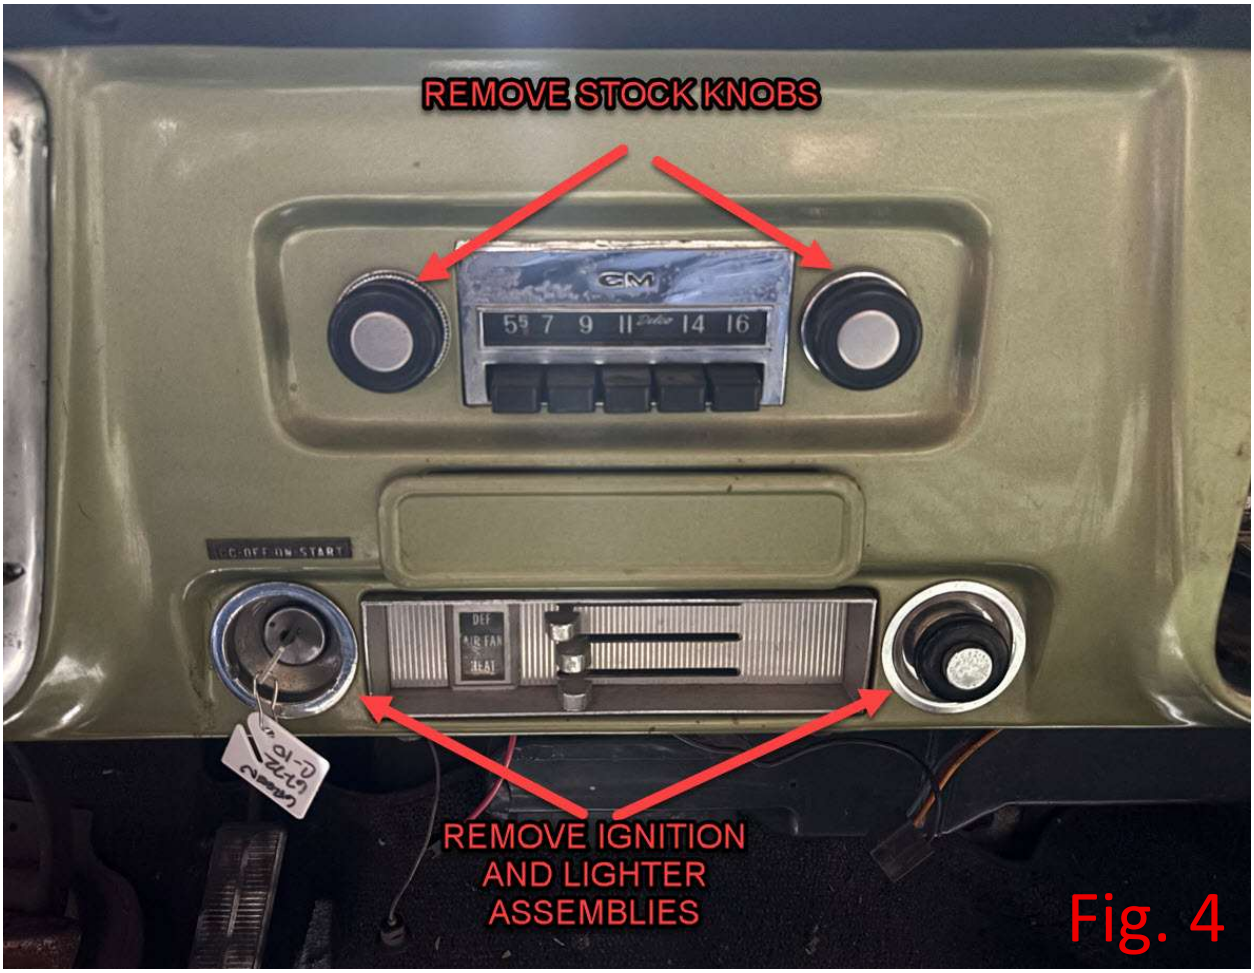

67C10-BZL INSTALL INSTRUCTIONS

Step 5: After disassembling the lighter and ignition assemblies (more details can be found in the next section), replace each bezel and assembly according to figure 5 and 6.

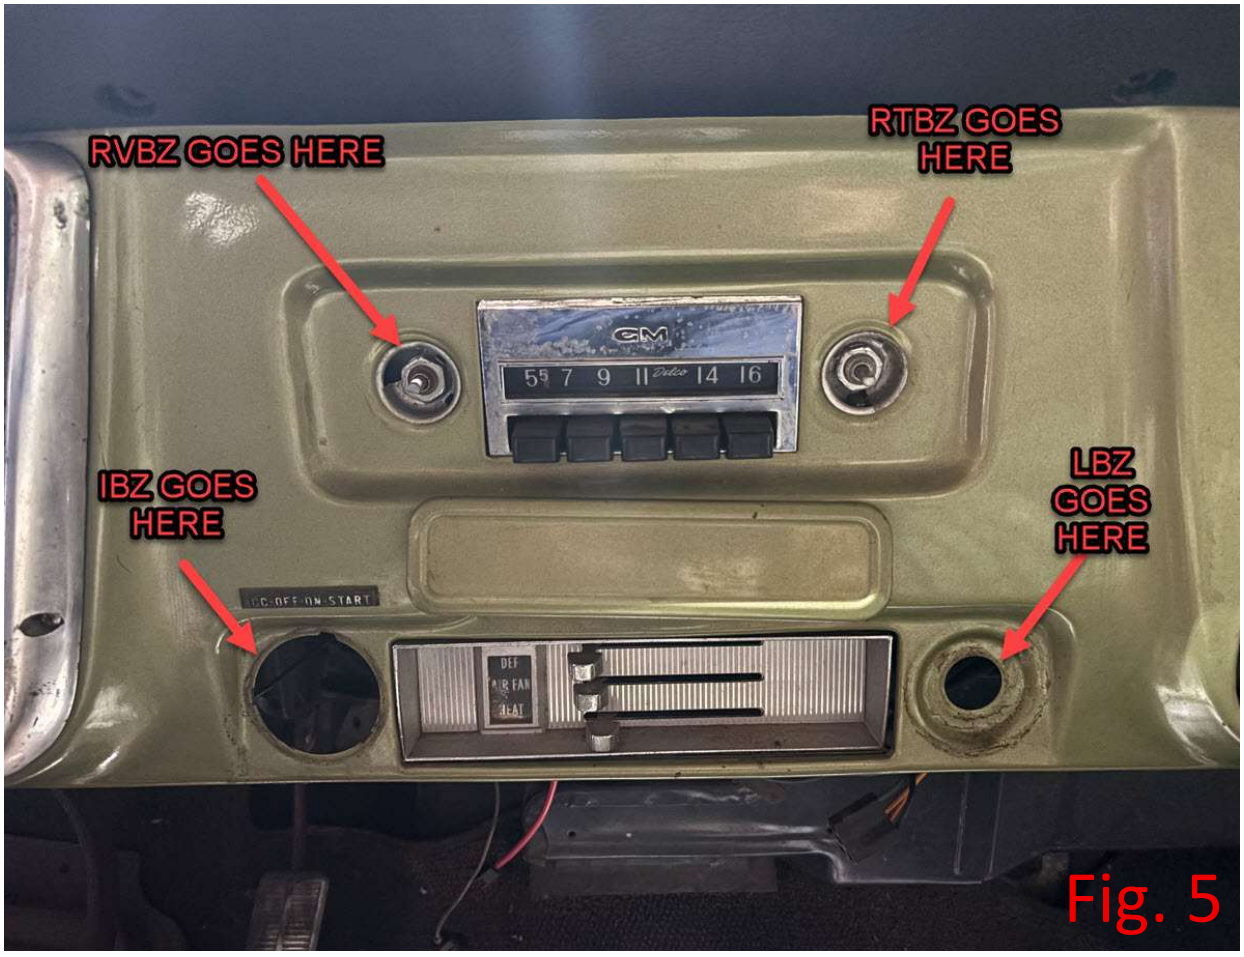



Step 6: Reconnect the negative battery terminal and verify all switches function correctly.

67C10-BZL INSTALL INSTRUCTIONS

IBZ (Ignition Bezel) Disassembly/Assembly

Step 1: Have the key in and turned to accessory.

Step 2: Use a paperclip or pick to depress the pin inside the small hole. (Fig. 1)

Step 3: While depressing, rotate the key counter-clockwise and the whole lock will come out. (Fig. 2)






Step 4: Unthread the old bezel from the rest of the ignition assembly and everything can then be removed from the dash.

67C10-BZL INSTALL INSTRUCTIONS

Step 5: Replace the old bezel with the new IBZ bezel and re-assemble. (Fig. 3)

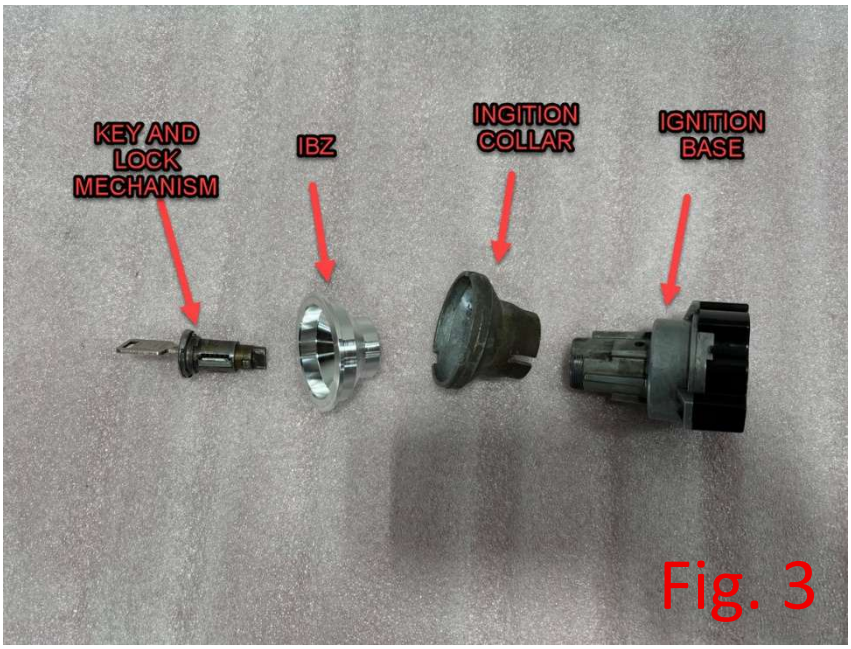

67C10-BZL INSTALL INSTRUCTIONS

LBZ (Lighter Bezel) Assembly

Step 1: Remove the electrical connection to the lighter assembly behind the dash.

Step 2: Unscrew the collar from the lighter assembly behind the dash.

Step 3: Remove the full assembly and bezel from the dash.

Step 4: Replace the new bezel with the old and re-assemble it into the dash. (Fig. 1)

