

Item	QTY
57122-R4 (Main Bracket)	1
6257722-052 (Spacer)	2
6257722-015 (Spacer)	1
6257722-380 (Spacer)	5
3/8-16 x 1.25 SHCS	2
3/8-16 x 0.75 SHCS	1
3/8-16 x 3.0 SHCS	2
3/8-16 x 2.25 HHS	1
3/8 SAE Washer	3
3/8-16 X .468 Lock Nut	3
SERP-IDLER-LT4-WR (Idler)	1
M10-1.50 X 120MM SHCS	5
<b>Total</b>	<b>27</b>
<b>18X10X4 BOX</b>	

# LSX-PSBRKT-R4



## Instructions


**Step 1:** Remove all current power

steering and alternator brackets

**Step 2:** Install the hardware in accordance with the picture on the following page. Do not tighten any of the bolts until you get them all started.

**Note:** This bracket works with CVF Racing's R4 AC Bracket (LSX-ACBRKT-R4). Decorative Idler Caps

# LSX-PSBRKT-R4 Instructions cont.

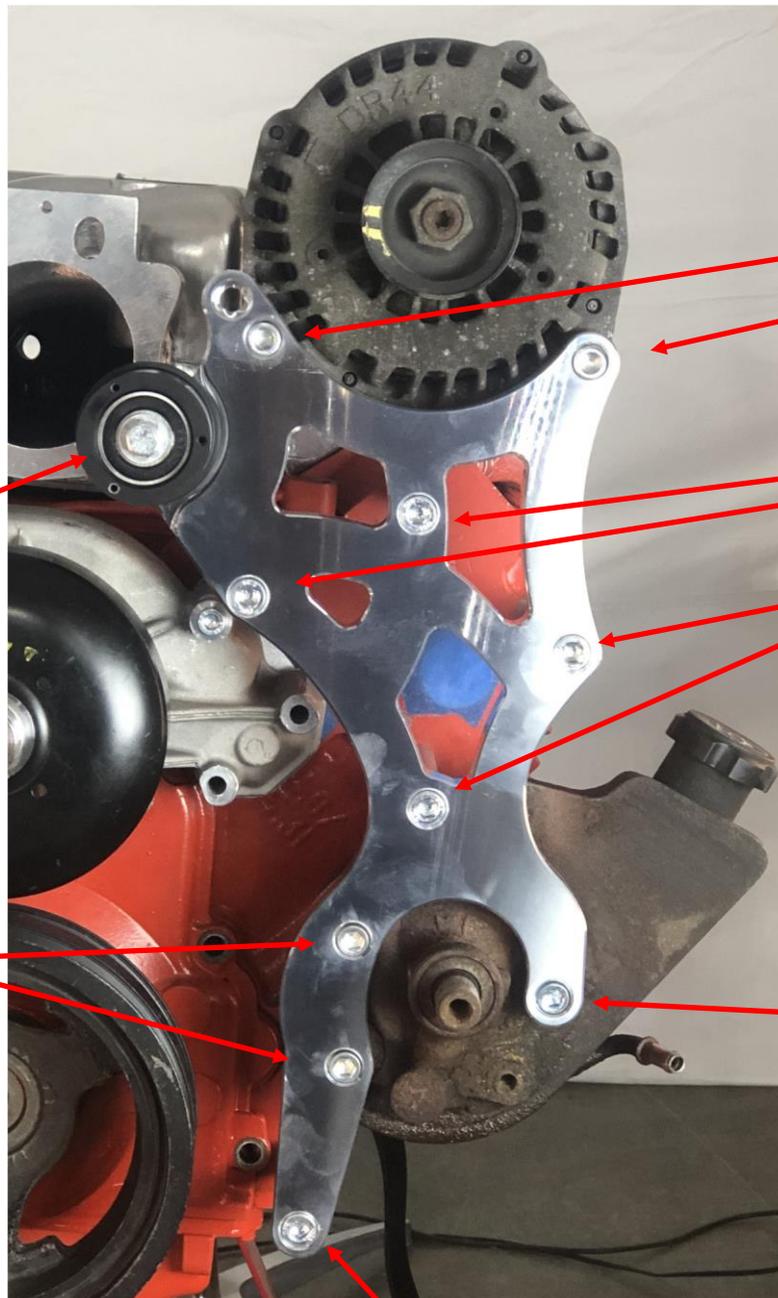

With the rib side of the idler against the bracket, secure with 3/8-16 x 2.25 HHS and a washer on the front and a locknut on the back.

3/8-16 x 3.0 SHCS (2)  
Washer on back, secure with locknut

M10 X 120MM SHCS (4)  
.625" X 3.8" Spacer (4)

3/8-16 x 1.25 SHCS  
.625" X .52" Spacer

3/8-16 x 0.75 SHCS  
.625" X .15" Spacer

M10 X 120MM SHCS  
.625" X 3.8" Spacer