LSX-ACBRKT-7B10 REV B

Part	QTY	Application
571247-PN	1	Main Bracket
6257722-225	2	Spacer between bracket and water pump
6257722-145	1	Spacer between bracket and water pump
M10 X 90 MM SHCS	2	Main Bracket to water pump
M8 X 120 MM SHCS	1	Main Bracket to Water Pump
M8-1.25 X 25MM SHCS	1	Top of Compressor to Bracket
M8-1.25 X 30MM SHCS	1	Bottom of Compressor To Bracket
M8 Acorn Nut	1	Bottom Compressor Bolt
3/8 Lock Nut	1	Tensioner Bolt
3/8 SAE Washer	1	Tensioner Bolt
3/8 X 3.0” BHCS	1	Tensioner to Bracket
Total	13	

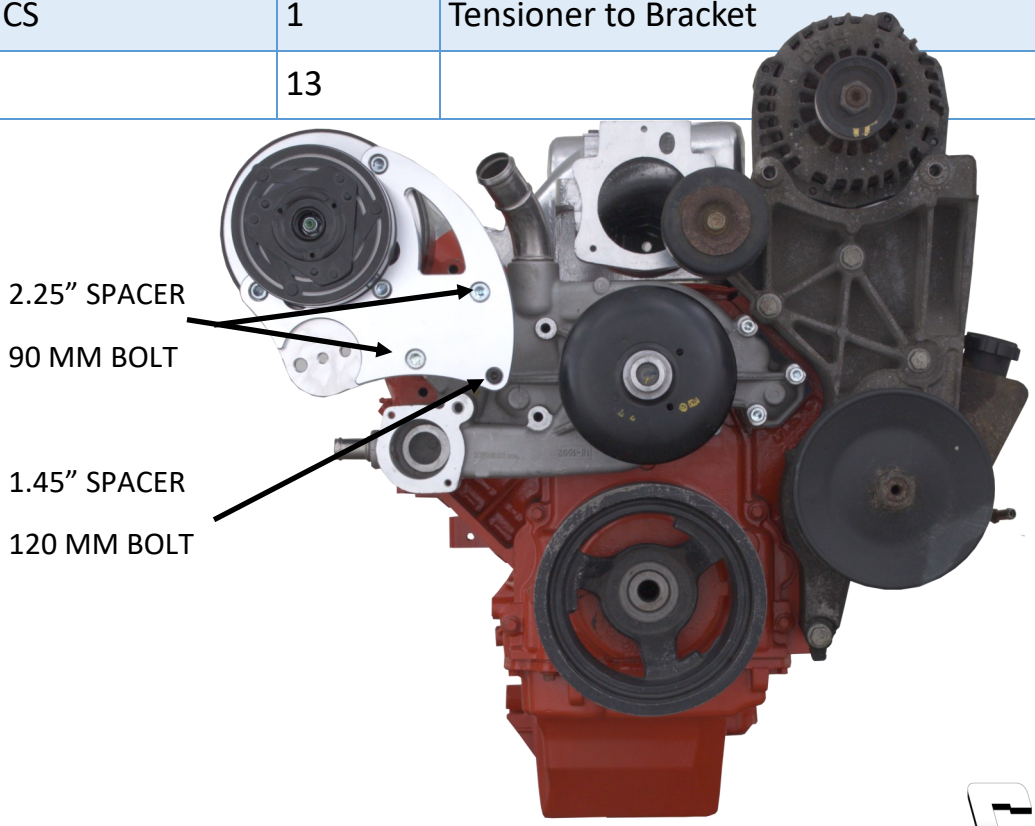

1. Remove all current AC brackets from the passenger side of your engine. This bracket will attach directly to your water pump.
2. Install the main bracket using the 90MM Bolts with the 2.25” spacers and the 120MM bolt and 1.45” spacer. Page 1 of these instructions show you where each bolt needs to be placed. All 3 will have to be done at the same time. Once all bolts are started, fully secure.
3. Install the 7B10 compressor to the main bracket. It will secure in 2 locations with an M8 X 25mm SHCS on top, and an M8 X 30mm SHCS and Acorn Nut on bottom.
4. Install the tensioner (not included; Part #38163 at your auto parts store). We have included an extra washer, lock nut, and a 3” bolt for your convenience.